



ELECTRO



Made in China



Model No.:PR-2308
Power:DC5V = 3W

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. It is important to read all these instructions carefully before using the product and save them for future reference or new users.



- WARNING: Keep the appliance and the adapter dry.
- WARNING: Do not use the device near bathtubs, showers, buckets or other containers that contain water, since the proximity of the water can be dangerous even if it is not working.
- The device contains a transformer. Do not cut the adapter to replace it with another plug, as this may cause a dangerous situation. The device should only be used with the power supply supplied with the device.
- The device should only be supplied with the safety voltage corresponding to the brand of the device.
- This device can be used by children from 8 years old and people with reduced physical, sensory or mental abilities or for lack of experience and knowledge if they have been given supervision or instructions on the use of the device safely and if they understand the dangers that entail. Children should not play with the device. Cleaning and user maintenance should not be performed by children without supervision.
- Keep the device and the cable out of reach of children under 8 years.

Thank you for purchasing the Electro Hair Trimmer. We hope you enjoy it!

This instruction manual will get you started and ready to make the most of your purchase.

- It is recommended to use the original charging cable to charge the device
- Never Immerse the device in water or rinse it under the tap.
- Use device only for its intended use as shown in the user manual.
- The device is designed for domestic use only, do not use it for other purpose.
- Do not plug or unplug the device with wet hands.
- Before plugging the charger into an outlet, please check if the voltage printed on the adapter corresponds to the local network voltage supply.
- For hygiene reasons, do not share your device with other people.
- Do not use this product if it is not working properly, if it has been dropped or damaged, or if it has fallen into water. Do not use this appliance with a damage or broken comb or with missing teeth of the blades, as it could cause injury.
- Keep the device, the plug and the power cord away from hot surfaces.
- Do not disassemble the unit, as they can cause serious injury.
- The cutting head is very sharp. Be careful when using the device without the guide comb.
- Do not expose the hair trimmer machine to temperatures below -10 degree Celsius or above 40 degree Celsius for extended period of time.

Product parts

1. Position comb
2. Blade
3. Body
4. Regulator
5. ON/OFF Switch
6. Charge indicator
7. Power port
8. Cleaning brush
9. Power cord
10. Blade oil
11. Extra guide comb



Charging the rechargeable battery

Before first use, the hair trimmer must be fully charged.

1. Slide the On/Off switch.
2. Insert the connector of the mains adaptor into the power jack of the hair trimmer.
3. Plug the mains adaptor into a mains socket.
4. The indicator light will come on to indicate charging. It will not go out when the battery is fully charged.
5. 70 minutes continuous operation when fully recharged.

Notes about the rechargeable battery

The rechargeable battery does not initially have a full capacity. To obtain the maximum charge capacity, the battery should be fully charged prior to being used for the first time, then the hair trimmer should be used until the batteries are completely flat. The batteries should then be fully recharged. To increase the life of the rechargeable batteries, this charging and discharging procedure should be repeated approximately twice a year. The rechargeable battery must be removed from the appliance before it is scrapped. The appliance must be disconnected from the mains when removing the battery. The rechargeable battery must be disposed of safely.

HOW TO USE

1. Make sure that the hair is clean and dry when being cut
2. Only cut small amounts of hair at one time
3. There are 20 gear adjustment with 0.5mm fine regulation
4. Slide the cutting head with slight tilt over your skin without applying pressure.
5. Cut the hair in progressively until you reach the desired length.
6. The cutting head will jam if you try to work too quickly or try to cut too much hair at one time.
7. Using the cutting head without its attachment, you can finely trim the hair.

Oiling the trimmer head

1. Oil the trimmer head from time to time if you use the trimmer regularly. Use non-corroding oil, for example sewing machine oil.
2. Remove the comb attachment.
3. Apply one or two drops of oil between the cutting teeth.
4. Turn the trimmer briefly on and then off again to distribute the oil.
5. Remove any excess oil by wiping with a cloth.

CLEANING AND MAINTENANCE

1. Disconnect the power cord from the trimmer.
 2. Remove the comb attachment.
 3. Hold the main body, place your thumb against the blades and then push them away from the main body.
 4. With a damp cloth clean the main body of the beard trimmer.
 5. Brushing the rest of beard from the main body of the device and around the blade.
- Store the trimmer in a place with low humidity after use.
 - Do not store the trimmer where it will be exposed to direct sunlight or other heat sources.
 - Store the cable in a dry area where it is protected from damage.
 - Keep the oil and brush away from children.

Correct disposal of this product



This marking indicates that this product should not be disposed of with other household waste. Batteries should be disposed of at a hazardous waste collection site (located at council transfer stations) or with a battery recycle service. Do not dispose of batteries with general household waste.



This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2006/66/EC which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point to have a professional remove the rechargeable battery.